



PowerBeam M5 air OS

MAIN WIRELESS NETWORK ADVANCED SERVICES SYSTEM Tools Logout

### Basic Wireless Settings

Wireless Mode: Access Point

WDS (Transparent Bridge Mode): ☒ Enable

SSID:  ☐ Hide SSID

Country Code:

IEEE 802.11 Mode:

DFS: ☒ Enable

Channel Width:

Frequency, MHz:

Extension Channel:

Frequency List, MHz: ☒ Enable

Calculate ERP Limit: ☒ Enable

Antenna:

Output Power:  dBm

Data Rate Module:

Max TX Rate, Mbps:  ☒ Auto

### Wireless Security

Security:

WPA Authentication:

WPA Preshared Key:  ☐ Show

MAC ACL: ☐ Enable

GENUINE PRODUCT

© Copyright 2006-2015 Ubiquiti Networks, Inc.

PowerBeam M5 air OS

MAIN WIRELESS NETWORK ADVANCED SERVICES SYSTEM Tools Logout

### Network Role

Network Mode:

Disable Network:

### Configuration Mode

Configuration Mode:

### Management Network Settings

Management IP Address: ☐ DHCP ☒ Static

IP Address:

Netmask:

Gateway IP:

Primary DNS IP:

Secondary DNS IP:

MTU:

Management VLAN: ☐ Enable

Auto IP Aliasing: ☒ Enable

STP: ☐ Enable

Pv6: ☐ Enable

GENUINE PRODUCT

© Copyright 2006-2015 Ubiquiti Networks, Inc.

PowerBeam M5
airOS

MAIN WIRELESS NETWORK ADVANCED SERVICES SYSTEM
Tools: Logout

### Advanced Wireless Settings

RTS Threshold: 2346 ☒ Off

Distance: 0.9 miles (1.4 km) ☒ Auto Adjust

Aggregation: 32 Frames 50000 Bytes ☒ Enable

Multicast Data: ☒ Allow

Multicast Enhancement: ☒ Enable

Installer ERP Control: ☐ Enable

Extra Reporting: ☒ Enable

Client Isolation: ☐ Enable

Sensitivity Threshold, dBm: -96 ☒ Off

### Advanced Ethernet Settings

LAN0 Speed: 100Mbps-Full

### Signal LED Thresholds

LED1	LED2	LED3	LED4
Thresholds, dBm: -94	-80	-73	-65

Change

© Copyright 2006-2015 Ubiquiti Networks, Inc.

PowerBeam M5
airOS

MAIN WIRELESS NETWORK ADVANCED SERVICES SYSTEM
Tools: Logout

### Ping Watchdog

☐ Enable

IP Address To Ping:

Ping Interval: 300 seconds

Startup Delay: 300 seconds

Failure Count To Reboot: 3

☐ Save Support Info

### SNMP Agent

☐ Enable

SNMP Community: public

Contact:

Location:

### Web Server

☒ Enable

Secure Connection (HTTPS): ☒ Enable

Secure Server Port: 443

Server Port: 80

Session Timeout: 15 minutes

### SSH Server

☒ Enable

Server Port: 22

Password Authentication: ☒ Enable

Authorized Keys: [Edit...](#)

### Telnet Server

☐ Enable

Server Port: 23

### NTP Client

☐ Enable

NTP Server: 0.ubuntu.pool.ntp.org

### Dynamic DNS

☐ Enable

Service: dyndns.org

Host Name:

User Name:

Password:  ☐ Show

### System Log

☐ Enable

Remote Log: ☐ Enable

Remote Log IP Address:

Remote Log Port: 514

TCP Protocol: ☐ Enable

### Device Discovery

☒ Discovery

☒ CDP

Change

PowerBeam M5
airOS

MAIN WIRELESS NETWORK ADVANCED SERVICES SYSTEM
Tools: Logout

### Firmware Update

Firmware Version: XW.v5.6.2

Build Number: 27929

Check for Updates: ☒ Enable [Check Now](#)

Upload Firmware: [Обзор...](#) Файл не выбран.

### Device

Device Name: MP\_Client

Interface Language: English

### Date Settings

Time Zone: (GMT+05:00) Ekaterint

Startup Date: ☐ Enable

Startup Date:

### System Accounts

Administrator User Name: ubnt

Read-Only Account: ☐ Enable

### Miscellaneous

Reset Button: ☒ Enable

Latitude:

Longitude:

Change

### Device Maintenance

Reboot Device: [Reboot...](#)

Support Info: [Download...](#)

### Configuration Management

Back Up Configuration: [Download...](#)

Upload Configuration: [Обзор...](#) Файл не выбран.

Reset to Factory Defaults: [Reset...](#)

© Copyright 2006-2015 Ubiquiti Networks, Inc.